
庞伯特® 智能乒乓球台

CUBE 25 使用指南

Pongbot®Smart Ping-Pong Table CUBE 25 Operation Manual

型号 (Model)：CUBE 25

版本 (Version)：V1.0

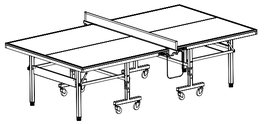

PONGBOT

上海创屹科技有限公司

Shanghai Future Mind Co.,Ltd

如您在使用过程中，遇到任何问题，均可登录官网或来电进行咨询！

If you encounter any problems during use, please call customer service or consult the official website.

创屹官方网址 (Website)：**www.pong-bot.com**

售后服务热线 (Customer Service)：**400-190-6688**

扫码观看安装视频

Scan and watch Installation Instruction

关注创屹微信公众号了解最新产品资讯


Scan and follow our official Wechat account

目录 (Table of Contents)

1. 产品构成 (Product Info)
2. 安装指导 (Installation)
3. APP 使用 (APP Features)

产品构成 (Product Info)

❶ 智能球台 (Smart Ping-Pong Table)

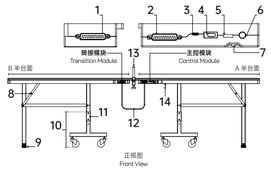

1 转接模块连接器接口
Transition Module Connector

2 主控模块连接器接口
Control Module Connector

3 电源适配器接口
Power Adapter

4 电源开关
Power Button

5 指示灯
LED Indicators

6 开始 / 停止按键
Start/Stop Button

7 静音 / 蓝牙配对按键
Mute/BLE Connection Button

8 折铰 ×4
Hinge × 4

9 可调节地脚 ×4
Adjustable Feet×4

10 T 型腿（含脚轮）×4
T-joint Leg (including castors)×4


11 T 型腿安装锁金 ×8
T-joint Leg Installation Plates×8

12 A-B 半台连接线
A-B Connection Cable

13 球网及网架
Net

❷ 传感器 (Sensor)

（各半台 4 个，共 8 个）
4 sensors per half-table, total of 8

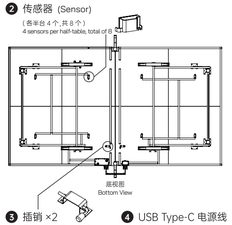

❸ 插销 ×2
Securing Bolts×2

（各半台 1 个，共 2 个）
1bolts per half-table, total of 2

❹ USB Type-C 电源线
Power Cable

❺ 安装扳手 ×2
Wrench×2

❻ T 型腿安装用小零件：
T-joint Leg Parts：

螺母 ×8
Nuts×8

螺栓 ×8
Bolts×8

垫片 ×16
Gaskets×16


安装指导 (Installation)

安装球桌时需注意安全，请 2 人配合进行安装

For your safety, this installation requires a minimum of two-people.


① 移除泡棉保护层，取出半张球台台面，下架朝上，置于包装纸箱或垫有软物的地面后，将插销拔出（见产品构成 ❸）

Remove protection foam and take out half-table. Its legs should be facing up as shown below. Pull out the securing bolt (Product Info ❸). To avoid scratches, make sure it's placed on top of the packaging box.



② 在确认插销已拔出后，向上提拉球台下架至与球桌桌面垂直状态。**注意请勿提拉折铰（易变形）！**


Lift up all legs (note that they should be perpendicular to table surface). Please avoid lifting the hinges for they might deform.



折铰（见产品构成 8 ）
Hinge (Product Info 8)


③ 将 T 型腿（见产品构成 10 ）与球台下架对齐，前后卡紧安装钣金（见产品构成 11 ）

Insert T-joint leg (Product Info 10), and place the installation plates (Product Info 11) on both sides of the leg (front and back) to secure.

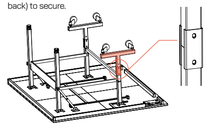

④ 使用垫片和螺栓、螺母（见产品构成 ❻ ）连接安装钣金，并使用安装板手（见产品构成 ❺ ）将其拧紧固定于下架


Insert two bolts through the installation plates, put gaskets in between and insert nuts at the end (Product Info ❻). Use a wrench (Product Info ❺) to secure the nut.

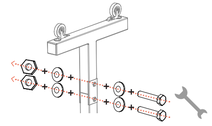

⑤ 按下折铰（见产品构成 8 ）至弯曲状，将球台往上翻起，移动到适合摆放的位置，再将折铰拉直

注意翻起过程中请勿提拉折铰（易变形）！

Bend the hinge (Product Info 8), lift and flip over the table. Once the table is placed at a desired position, straighten the hinge.

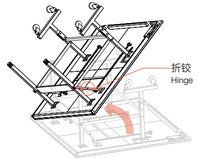


⑥ 重复步骤 1 至 5 完成另半台球台的拼装

Repeat step 1 to 5 to complete installing the other half-table


⑦ 将已安装好的对半球台拼凑在一起（注意方向）

Place the installed two half-tables together



⑧ 旋转球台可调节地脚（见产品构成 9 ），调节球台 4 个边角的高度，保持球台台面离地 76cm，按下 4 个 T 型腿底部脚轮刹，旋转脚轮，调至适当的高度后，将脚轮固定

Rotate to adjust the height of the four adjustable feet (Product Info 9). The ideal distance between table surface and ground is 76cm. Rotate to adjust the castors from the T-joint legs, press down and secure all of the castors once an ideal height is reached.

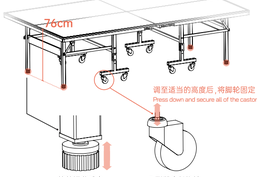

安全信息 Safety Information

在使用和操作设备前，为确保设备性能最佳，并避免出现危险或非法情况，请查阅并遵循所有的安全信息

To avoid danger and illegality, please carefully read and follow all of the below-mentioned safety information prior to installation and utilization of the device

操作与安全 Safety Instructions

为了防止可能的身体疲劳，请勿长时间使用锻炼

- 请在温度 -10°C ~ 45°C 范围内使用本设备，并在此温度范围内存放设备及其配件。当环境温度过高或过低时，可能会引起设备故障
- 请勿将设备暴露在高温或发热设备的周围，如取暖器、微波炉、烤箱或热水器等
- 使用设备时，电源插座应安装在设备附近并应易于触及
- 当设备不使用时，请断开电源适配器与设备的连接并从电源插座上拔掉电源
- 使用未经认可或不兼容的电源适配器，可能引发火灾、爆炸，设备损坏或其他危险
- 只能使用设备制造商认可且与此型号设备配套的配件。如果使用其他类型的配件，可能违反本国设备保修条款及相关规定，并可能导致安全事故。如需获取认可的配件，请与创屹科技客户服务中心联系
- 使用非授权第三方软件升级设备固件和系统，可能存在设备无法使用或者泄漏您个人信息等安全风险。建议您使用官方 APP 进行升级

To avoid physical fatigue, please do not exercise long-termly

- Please use and store the device and its accessories under the environment of -10°C ~ 45°C . When the temperature is too high or low, an error might occur
- Please do not expose device to surroundings of other high-temperature devices, including heater, microwave, oven, water heater, etc.
- During use, the power outlet should be close to the device and within reach
- When not in use, please disconnect the power adapter from the device and remove the power plug from the outlet
- Be aware that uncertified or incompatible power adapter might cause fire, explosion and other potential danger
- Please only use accessories that are certified by the device manufacturer or corollary equipment of the device. Any other type of accessories might result in violation of national warranty and related regulations that could cause safety incidents. Please contact Pongbot's Customer Service Center for certified accessories
- Use of uncertified, third-party software during firmware and system update might result in dysfunctional device or leakage of personal information. To upgrade, use of official APP is highly recommended

上海市浦东新区金皖路 199 号

No.199, Jinwan Rd., Pudong Shanghai

+86 4001906688

marketing@pong-bot.com


www.pong-bot.com

版权所有 © 上海创屹科技有限公司。保留一切权力。本指南仅供参考，不构成任何形式的承诺。产品与指南存在细节差异，尺寸、重量等以实物为准。

Copyright © Shanghai Pongbot Co., LTD. All rights reserved. This guide is for reference only and does not constitute any kind of commitment. Products (including but not limited to color, size, weight, etc.) shall prevail in kind.


⑨ 安装球网及网架（见产品构成 13 ）

Install net (Product Info 13).




⑩ 将 A-B 半台连接线（见产品构成 12 ）两端分别插入转接模块及主控模块连接器接口（见产品构成 1&2 ），旋紧连接线两端紧固螺丝

Insert the A-B connection cable; one end to transition module connector, the other end to control module connector. Rotate and fasten the screws on both ends of the plugs to secure the cable.

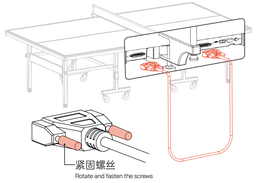

⑪ 将电源线（见产品构成 ❹ ）插入主控模块，接通电源后打开开关（成功开机后指示灯呈蓝色慢闪烁）

Connect power cable (Product Info ❹) to the Control Module and turn on power button (Product Info 4). Once the device is turned on, its LED indicator should blink in blue.




⑫ 球台安装完成。如需静音，请点击一次主控模块下方“静音 / 蓝牙”按键（见产品构成 7 ），再次点击则取消静音

Set-up for the smart ping-pong table is completed. The mute button (Product Info 7) can be found under the Control Module if needed. Click once to mute and unclick to unmute.

⑬ *** 需要存储时**

需要存储时，将球网架取下（见产品构成 13 ），松开 T 型腿底部脚轮刹（见产品构成 10 ），弯曲折铰（见产品构成 8 ），向上折叠球台后，将插销（见产品构成 ❸ ）插入桌腿并将球台移动到存储的位置，踩下脚轮刹

When storage is needed, uninstall the net (Product Info 13), release castor break (Product Info 10), bend the hinge (Product Info 8), then lift up and fold half table. Once the half table is folded, make sure the seruing bolt is plugged in (Product Info ❸). Press down and secure all of the castors once the table is stored in a proper place.

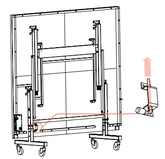

使用 APP 可探索更多功能

Download APP to explore more product features.

(Currently APP and related services are only available in China)

APP 使用 (APP Features)

(Currently APP and related services are only available in China)

① 使用**庞伯特 APP** 探索更多功能，请通过以下渠道下载 APP

Download the Pongbot APP to explore more product features, please download via:

1. 扫码下载 (Scan QR code)
2. 官网下载 (Official website: www.pong-bot.com)
3. 各大应用市场搜索“PONGBOT”或“庞伯特”下载 (Search “Pongbot” at APP stores)

② 请在注册账号后登录，进入 APP

Please register an account and log in.



2.1 于“设备”列表页点击“+”添加设备

Click “+” to add new device

2.2 智能乒乓球台

Select Smart Ping-Pong Table

2.3 选中您的设备后点击“蓝牙配对”

Select your device and click “BLE Connection”

③ 成功添加设备后，启动设备，即可开始体验

Once the device is successfully added, initiate device to use



3.1 添加设备成功时指示灯（见产品构成 5 ）呈蓝色常亮

Once device is successfully added, the LED indicator appears blue

3.2 点击已连接的设备

Select and Click

3.3 点击唤醒设备

Initiate device

Warranty Card

Pongbot®Smart Ping-Pong Table

Customer Info

Name: _____ Address: _____

Phone: _____ Postal Code : _____

E-Mail: _____

Product Info

Model: _____ SN: _____

Origin: _____ Service：400-190-6688

Retailer Info

Name: _____ Address: _____

Phone: _____ Postal Code : _____

Invoice #: _____ Date of Sale: _____

Retailer Stamp :

Notice:

- Pongbot®Smart Ping-Pong Table strictly follows and executes national warranty regulations. Pongbot values and respects consumers' rights, we solemnly promise to provide post-sales services, maintenance, exchanges and returns under national regulations.
- Below-mentioned situations are not included in warranty:
1. Human factors and abnormalities that cause damage to the device (ex. harmful power source, foreign matter enters the device, poor transportation by customers, etc.)
2. Disassemble and maintenance behavior by non-appointed personnel that causes damage
3. Performance index and technical parameters meet the standards of product design and regulations
4. Forced device operation when parts have been damaged or aged
5. Use of non-original accessories (not manufactured by Pongbot) that causes error or damage
6. Unavoidable factors that cause device damage, including natural disasters, such as earthquake, flood, fire, etc.
7. Products that exceed warranty periods

三包凭证

庞伯特®智能乒乓球台

用户信息

姓名：_____ 地址：_____

电话：_____ 邮政编码：_____

邮箱：_____

产品信息

型号：_____ SN：_____

产地：_____ 服务热线：400-190-6688

销售商信息

姓名：_____ 地址：_____

电话：_____ 邮政编码：_____

发货票号：_____ 销售日期：_____

销售商印章：

备注：

- 庞伯特®智能乒乓球台严格执行国家三包法，遵守行业准则，并充分尊重消费者权益。为消费者提供全方位服务保障和郑重承诺，对国家规定或者与消费者约定包修、包换、包退的商品，创屹科技承诺负责修理，更换或者退货
- 以下情况不属于三包范围：
1. 人为因素和非正常原因（不良的电源环境、异物进入设备，客户不良运输等）造成设备的损坏
2. 非创屹科技指定服务人员所拆解、维修等行为造成设备的损坏
3. 性能指标或技术参数达到产品设计及说明标准的
4. 在零部件发生老化或损坏的情况下强制运行造成设备的损坏
5. 使用非创屹科技原厂配件造成设备的故障或损坏
6. 不可抗因素造成设备损坏，如地震、洪水、火灾等自然灾害
7. 已超过保修期的产品